



SNO-KONE MACHINE

Included Items:

- Sno Konette Machine
- Scoop
- Sno Kone Syrup in Bottles
- Pumps for Bottles
- Drain pan and drain hoses, if required.

Electrical Requirements:

- Normal amp draw for unit at 120 volts is 6.8 Amps.

Operating Instructions:

- Customer supplies ice. Either cube or block ice can be used. If using block ice, break block into pieces 3 to 4 inches in size.
- Switch the motor on and wait for the motor to come to full speed.
- Fill the gooseneck within an inch of the top with ice cubes or block ice. The larger the pieces the better the snow.
- Push the pusher handle down against the ice in the gooseneck. Apply firm even pressure to make the best snow. You may find that you need to relieve the pressure 2 to 3 times during a cycle. Too much pressure may stall the motor and will result in snow that is coarse. Providing too little pressure will result in snow that is mushy.
- Never allow any foreign or metallic objects around the shaver area.
- Do not place hands or fingers in gooseneck chute (shaver area). **Chute contains rotating blades that could cause serious injury.**

Shut Down Procedures:

- Turn the power to the "off" position.
- Unplug the machine.
- Clean the scoops and pumps with hot soapy water.
- Wipe the entire unit cabinet inside and out and remove any excess syrup from the unit.
- Wipe down exterior of syrup bottles.
- If provided, rinse drain pan and drain hose with hot-soapy water.
- **Please do not use any chlorine-based cleaning products on the unit or permanent damage to stainless steel may result in additional expense.**